

PCM266 Smart Submersible Level Transmitter

Features

- Piezoresistive diffused silicon pressure sensor
- Probe insertion measurement method, easy to install
- For level measurement
- Multiple protective structure design, high protection ability
 LCD option
- Variety of styles, suitable for
- various industrial applications
 Anti-corrosion stainless steel material adopted, suitable for
- many occasions

Applications

Static pressure level, liquid irrigation, sewage, industrial water, pool, well, river, sea water, lake, etc

Notes:

1 Do not touch the diaphragm with hard objects, which may cause damage to the diaphragm.

2 Please read the Instruction Manual of the product carefully before installation and check the relevant information of the product.

3 Strictly follow the wiring method for wiring; otherwise it may cause product damage or other potential faults.



Product overview

PCM266 Smart Submersible Level Transmitter accurately measures static pressure of the liquid proportional to the level depth using high performance piezoresistive diffused silicon pressure sensor as the measuring element. The result is converted to standard current or voltage signal output through signal conditioning circuit, establishing the linear corresponding relation between the output signal and liquid depth to complete the measurement of the liquid depth. The product has advantages of high precision and small volume. Submerse it directly into liquid, the height between the end of the transmitter to the liquid surface is measured easily. The product is applicable to the measurement and control of the liquid level in the petroleum, chemical industry, power plant, urban water supply and hydrological exploration fields.

PCM266 has passed long-term aging and stability screening with stable and reliable performance and can be used in harsh outdoor environment. Meanwhile, it can display liquid level on site. Zero shift and full scale span shift available. Hart and RS485 protocols are available.

Notes:

1 Do not misuse documentation.

2 The information presented in this product sheet is for reference only. Do not use this document as a product installation guide.


3 Complete installation, operation, and maintenance information is provided in the instructions of the product.

4 Misuse of the product may cause danger or personal injury.




Performance parameters				
Proceuro rongo	0~1m5m20mH2O			
Pressure range	Other pressure range can be customized			
Supply & output	12~36V supply:4~20mA+Hart, RS485-MODBUS output			
Operating temp.	-20℃~85℃			
Medium temp.	-10℃~70℃			
Storage temp.	-40°C~125℃			
Zero temp. coefficient	Range	±1.5%FS (-10~70℃)	Range	±3%FS(0∼60℃)
Span temp. coefficient	>4mH2O	±1.5%FS (-10~70℃)	1~4mH2O	±3%FS(0∼60℃)
Overpressure	200%FS~300%FS			
Mechanical vibration	20g, 25Hz~2kHz; IEC 60068-2-6			
Shock	10g/11ms; IEC 60068-2-27			
Overall Accuracy	$\leq \pm 0.5\%$ FS (Range>1mH20); $\leq \pm 1\%$ FS (Range:1mH20)			
Insulation	200MΩ/250VDC			
Long term stability	±0.2%FS/year			
Protection	IP68			
Matarial	stainless steel for level probe			
Material	Polyurethane wire for cable			
Medium compatibility	All kinds of media compatible with stainless steel 304			

Electrical connection and wiring method

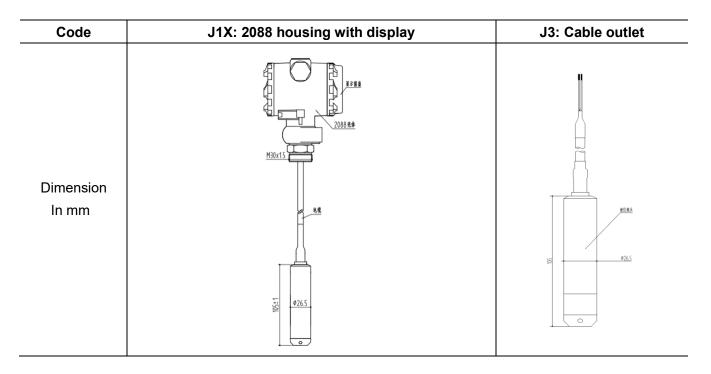



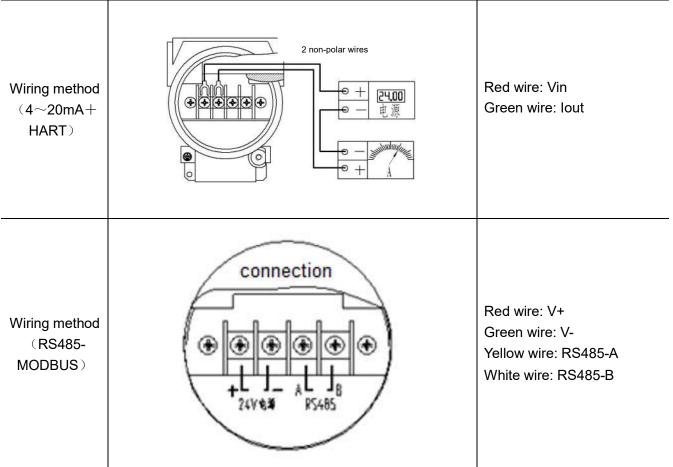


Product selection and installation instructions (for reference only)

1. Product selection

It is recommended to use the 2088 housing type liquid level transmitter for outdoor conditions. If the direct lead type liquid level transmitter is selected for outdoor conditions, the customer terminal needs to be connected to a waterproof junction box or other sealing measures.

2. Installation in still water (deep wells, pools, liquid tanks, etc.)

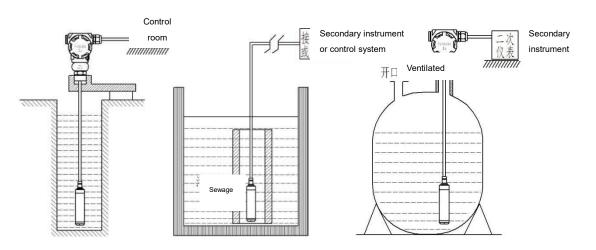


Installation tips:

 When measuring the level of stationary fluid in an open container, place the level transmitter vertically into the bottom of the container and secure the cable connecting the transmitter to the 3www.wtsensor.com



junction box at the opening of the container.

- 2) When the medium viscosity is relatively large (such as sewage pool),casing or bracket can be installed to ensure that the transmitter can be put into the bottom of the container.
- 3) When doing an open-air installation, the terminal box of the transmitter should be placed in a ventilated and dry place to avoid direct exposure to light and rain, which may cause the shell temperature to be too high or water to get inside and damage the internal circuit board.
- 2. Installation in moving water (rivers, lakes, etc.)

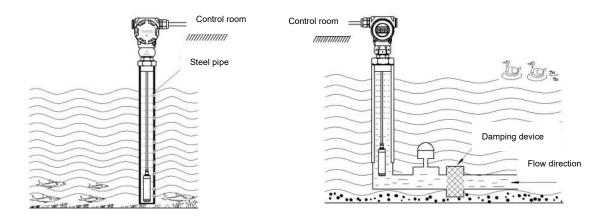

Installation tips:


- 1) When measuring the water level in flowing water, when the medium fluctuates greatly, a steel pipe can be inserted in the water channel with an inner diameter of about 5cm. Make several holes of about Φ5 in diameter on the side of the immersed pipe opposite to the flow direction to allow water to enter the pipe and fix the cable and junction box at the outlet of the pipe.
- 2) When the medium of the water channel fluctuates greatly or the sediment is large, a damping device can be installed to filter the sediment, eliminate the adverse effects of dynamic pressure and wave and ensure the measurement accuracy.

Pressure range selection					
Pressure	Pressure	Pressure	Overpressure	Burst	Remark
range	reference	range code		pressure	
≤ 1m H20	G	10kG	300%FS	600%FS	
<4m H20	G	35kG	300%FS	600%FS	
<7m H20	G	70kG	300%FS	600%FS	
≪12m H2O	G	100kG	300%FS	600%FS	
≤ 18m H20	G	160kG	300%FS	600%FS	
≤ 20m H20	G	250kG	300%FS	600%FS	

Cable length selection				
Pressure	range	Standard cable length	Code	Definition
code			Code	Deminion
10kG		Cable length 1 meter	L1	Please inform us if
35kG 70kG		Cable length 1 meter	L1	you need longer cable.
		Cable length 1 meter	L1	
100kG		Cable length 1 meter	L1	longer cable.

W sensor			
160kG	Cable length 1 meter	L1	
250kG	Cable length 1 meter	L1	

How to order

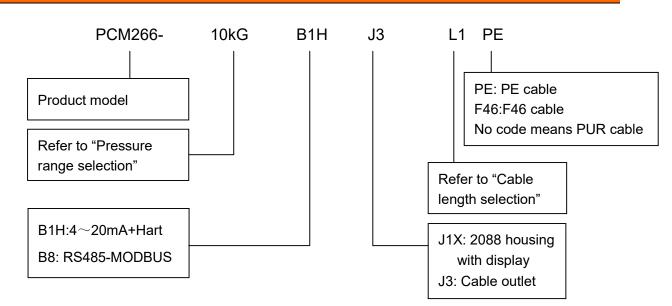

Example: PCM266-10kGB1HJ3L1-PE

Refer to product model PCM266, with pressure range10kPa gauge, output signal($4 \sim 20$ mA+Hart), electrical connection cable outlet, PE cable length1m.


Note: The cable is PUR cable if not specified.

Optional accessories

- 1. The part of cable exceeding the standard cable length
- 2. PCM260 anti-blocking protective cover (with filter)
- 3. Protective cap hole blocking plate

Cautions

When using the level transmitter, the vent tube should be open to the air. Please be noted that the vent tube cannot be clogged or bent. The vent tube should be treated with waterproof and dust-proof, or the transmitter will not function normally or even be damaged.

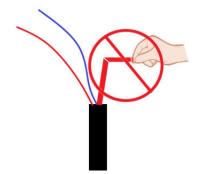

Do not bend the vent tube.





Do not expose the vent tube. to rain or water. Do not clog the vent tube.

5www.wtsensor.com



Nanjing Wotian Technology Co.,Ltd. Website: www.wtsensor.com Add: 5 Wenying Road, Binjiang Development Zone, Nanjing, 211161, China